

Updating the Magellan RoadMate 1440 to firmware version 2.05

This guide will help you upgrade your Magellan RoadMate 1440 with the most recent firmware. Go through the checklist to ensure you have everything you need before starting the upgrade process.

- Magellan RoadMate 1440 receiver with a fully charged battery
- IBM-compatible PC with following minimum requirements
 - Pentium or higher processor
 - Internet connection
 - USB Port
 - Microsoft® Windows® XP or Vista™
 - SVGA (800x600) 16-bit color monitor
- USB cable

The process for you to upgrade the firmware takes about 20 minutes after downloading the executable (.zip file).


Before starting:

Do not connect your Magellan RoadMate 1440 to the USB port of your computer until instructed to do so.


1. The battery of your Magellan RoadMate must be fully charged before beginning the update.
Note: It takes between 3 and 4 hours to fully charge the battery with your vehicle power adapter or an optional AC power adapter. Check System Settings on the Magellan RoadMate to ensure the battery is fully charged.
2. Close all other applications on your PC. This includes virus checkers and applications that are running in your system tray. This will enable the upgrade process to run more smoothly and efficiently.
3. Do not connect your Magellan RoadMate to your PC until instructed to do so by the Update Wizard.
4. The Update must be completely downloaded and run from hard drive of your PC.
5. Disconnect all Pocket PC devices from the USB ports on your PC.

Update process. Please print these instructions:

1. Download the Update (Magellan_RoadMate_1440_2_05_Rel3.zip) and save it to your desktop.
2. Unzip the file and open the folder Magellan_RoadMate_1440_2_05_Rel3.
3. Double click the Magellan_RoadMate_1440_2_05_Rel3.exe file.

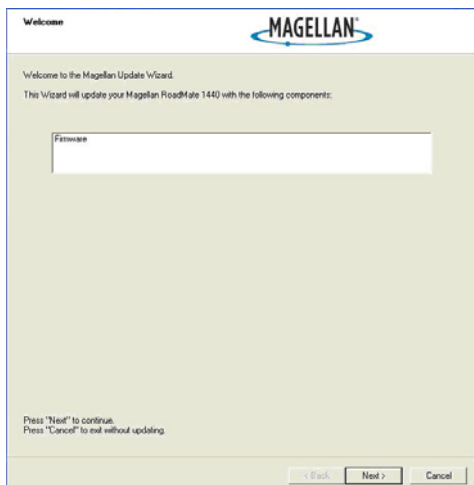

4. Click Next on the Welcome screen:
5. Read the Attention screen and press Next.

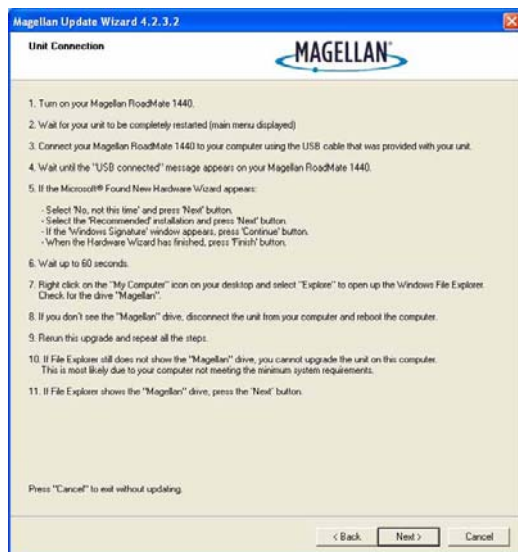

6. Power on your Magellan RoadMate and wait for the receiver to display the Main Menu.
7. Connect the Magellan RoadMate to your computer using the USB cable.

Please NOTE: When connecting your Magellan receiver to your computer you may be prompted to install drivers for connectivity between your PC and the Magellan receiver. Please refer to the instructions below for assistance in installing the driver. Wait for 1 minute for Microsoft Windows to install the driver and mount the receiver.

- a) Right click on the "My Computer" icon on your desktop and select "Explore" to open the Windows File Explorer. Check for the drive "Magellan".
 - b) If you do not see the "Magellan" drive, disconnect the unit from your computer and reboot the computer.
 - c) Rerun this upgrade, repeating all of the steps.
 - d) Check the Windows File Explorer again for the "Magellan" drive. If it is not there, this upgrade cannot be performed from this computer. This is most likely due to your computer not meeting the minimum system requirements.
 - e) If the Windows File Explorer shows the "Magellan" drive, press the "Next" button.
8. If the "Windows Signature" window appears, press the 'Continue' button.

Click Next>. The update process will begin. Progress bars are displayed showing the progress of the update. Do not power off your RoadMate. Do not disconnect the USB cable during the update process.



9. The updater will indicate that the update was successful. Remove the USB cable and click Finish.
10. The Magellan RoadMate will restart automatically to complete the update process. Do not press any button.
11. The Magellan RoadMate has been updated to firmware version 2.05 and is ready to use.

Driver Installation Instructions (required only if prompted)

The image displays four sequential screenshots of the Windows 'Found New Hardware Wizard' dialog box. The first screenshot shows the 'Welcome' screen with a blue header and a circuit board background. It includes a 'Welcome to the Found New Hardware Wizard' message, a brief explanation of Windows' search capabilities, a link to the privacy policy, and a question about connecting to Windows Update. Three radio buttons are present: 'Yes, this time only', 'Yes, now and every time I connect a device', and 'No, not this time' (which is selected). The second and third screenshots are identical, showing the 'What do you want the wizard to do?' screen. It lists 'Magellan RoadMate' as the hardware and offers two options: 'Install the software automatically (Recommended)' (selected) and 'Install from a list or specific location (Advanced)'. The fourth screenshot shows the 'Completing the Found New Hardware Wizard' screen, indicating that the software has been successfully installed and offering a 'Finish' button to close the wizard.

Your computer may prompt you with the “Found New Hardware Wizard”. The Hardware Wizard will help you to install the needed driver software. A driver is a small piece of software needed to ensure proper communication between your computer and the device.

To install the software, select “No, not this time” and click Next.

Select “Install the software automatically (Recommended)” and click Next.

Your computer will search for and prepare to install the driver.

If you agree to install the driver in your computer, click “Continue Anyway”.

After the Hardware Wizard has installed the software, click “Finish” and continue with the update.

**** If the update fails for any reason, check the minimum system requirements and try running the update wizard again before contacting Technical Support (www.magellanGPS.com/support) ****